

There are 3 pieces that come with your tail light – 2 plastic collars that can fit around different diameter tubing on your bike and a mount that can be secured to either collar with the included screw. The clip on the back of the light will slide into the mount and you should hear a click when the light is securely positioned within the mount. To release the light: press the bottom release tab (rounded portion) of the mount and pull the light up and out of the mount.

Straight out of the box the mount should already be attached to the larger seat post collar. The larger collar will fit a seat post of up to 31.8mm in diameter. The smaller collar is intended to fit on the seat stay tube of the frame. There are two rubber shims also included that can be used to get the collar to fit snugly on a smaller diameter seat post.



To attach the bracket: take out the screw, pull open the collar to fit around your seatpost or seat stay and insert a rubber shim if necessary. You will want to place the collar so that the small embedded nut is on the left side of the bike (looking forward) – this will allow the light to be mounted so that the light slides down into the mount. Attach the mount to the collar by threading the screw through the mount first and then into the side of the collar with the embedded nut. The mount will tilt within the bracket so you can angle the light to be as visible as possible. Once the correct angle is selected be sure to tighten down the screw snugly so that the mount will not slip and the light will end up tilted towards the ground.

