



## U-Lock Bike Mount Bracket

For Models #2031 and 2033

Adjustable two piece bracket can be configured straight or at a right angle for various mounting needs.

1. Assemble the two piece bracket to either the straight (figure 1 and 2) or the side carry set up (figure 3 and 4). Secure the two piece bracket together by tightening the center screw.
2. Mount bracket to seat tube or top tube and secure with two bolts and nuts (included). Make sure not to pinch cables under the bracket and lock is clear of moving parts on bicycle.
3. Using the cam lever bolt and nut, secure the lock into the bracket.



### Warnings:

- Securely tighten bracket to frame and lock using included hardware.
- Inspect lock placement before each ride. Be sure lock is clear of all moving parts and does not interfere with feet or legs while riding.
- Any modifications to the bracket or lock is not recommended and voids warranty.

Planet Bike  
www.planetbike.com

© 2011 Planet Bike. All Rights Reserved.

### STRAIGHT CARRY SETUP

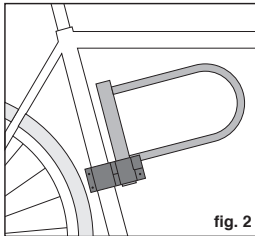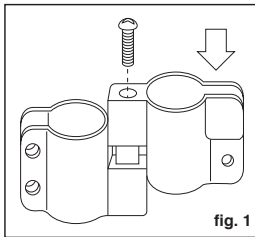

### SIDE CARRY SETUP

