



U-Lock Bike Mount Bracket

For Model #2036

Installation:

1. Identify the best location and orientation of the bracket and lock on the frame avoiding cables, moving parts and the riders feet and legs. Mounting to the seat tube is recommended (Figure 2).
2. Mount the bracket to seat tube and secure with two bolts and nuts (included). The included shim may be needed for smaller diameter tubes.
3. Mount your U-lock to the bracket by first unlocking the lock. Slide the lock bar (with key) in the bracket until the hole line up with the hole in the bracket. Slide the U part of the lock in the bracket and into the lock bar, then lock and remove the key.

Warnings:

- Securely tighten bracket to frame and lock using included hardware.
- Inspect lock placement before each ride. Be sure lock is clear of all moving parts and does not interfere with feet or legs while riding.
- Any modifications to the bracket or lock is not recommended and voids warranty.

Planet Bike
www.planetbike.com
© 2011 Planet Bike. All Rights Reserved.

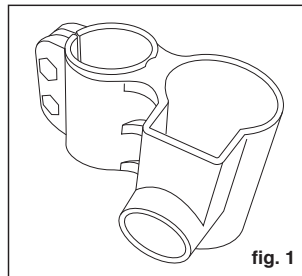


fig. 1

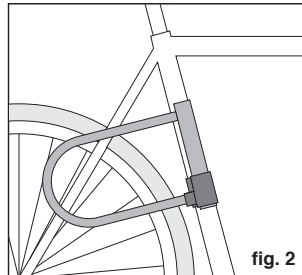


fig. 2