

HANDLEBAR TAPE INSTRUCTIONS



We love the balance that the bicycle brings to the world and its power to make people, communities and the planet healthier. In addition to creating products that make cycling safer and more enjoyable, we pledge time, resources and profits to organizations working for sustainable transportation solutions. Come ride with us.

GOOD GEAR GUARANTEE



We are so confident in the quality of our products that we offer a limited lifetime warranty to the original owner of Planet Bike products. Warranty does not cover damage due to accident, abuse, or normal wear and tear. Any modification to Planet Bike products will void all warranty. Proof of purchase is required. Return of the product is required for inspection. Contact your Planet Bike dealer or warranty@planetbike.com.

INSTRUCTIONS

STEP 1: Start by pulling back brake hood covers and taping cable housing to your bars in a few spots. You will also need a pair of scissors within reach as you move through the process.

STEP 2: Place the tape on the underside of the drop end of the bar with half a width of tape extending beyond the end of the bar.

NOTE: When looking at the bar in riding position, wrap clockwise on the right side and counterclockwise on the left.

STEP 3: Tightly wrap around the bar up to the brake hood clamp. Overlap each layer by 1/3 - 1/2 the tape width. If you desire more comfort, we recommend a 1/2 tape overlap.

STEP 4: As you approach the brake clamp, place the 3-inch piece of bar tape over the brake hood clamp (trim as needed).


STEP 5: Wrap closely around the bottom and inside of the brake hood clamp and then continue over the top of the bar.

STEP 6: Continue wrapping until you are about 1.5 inches from the stem.


STEP 7: Trim the end of the tape at an angle so it ends flush with the final wrap. Use the finishing tape to secure the end of the bar tape.

STEP 8: Fold the overlapping bar tape into the handlebar end. Insert the bar end plugs into the end of the handlebars and tighten with the included 3mm hex wrench.


Enjoy the ride!

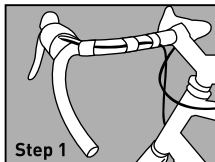


Step 1

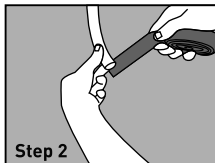

Step 2

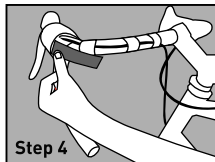

Step 4

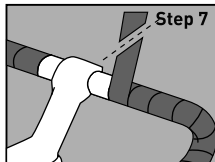

Step 7

