




### Micromite Assembly Instructions (Part# 1020)

The order that the parts go into the head:

1. Start with the pin that is longer and thicker on one end and shorter and thinner on the other.
2. Take the smaller magnetized washer and stick it on the long end of the pin. It should cling to the pin.
3. Take small rubber washer and place it on top of the magnetized washer.
4. Take large metal washer and place it on top of small rubber washer. Large washer should barely be held on by small washer's magnetic field.
5. Take large rubber washer and set it on top of large metal washer with the ridge facing away from it.
6. Stick whole contraption into pump head and screw on cap.

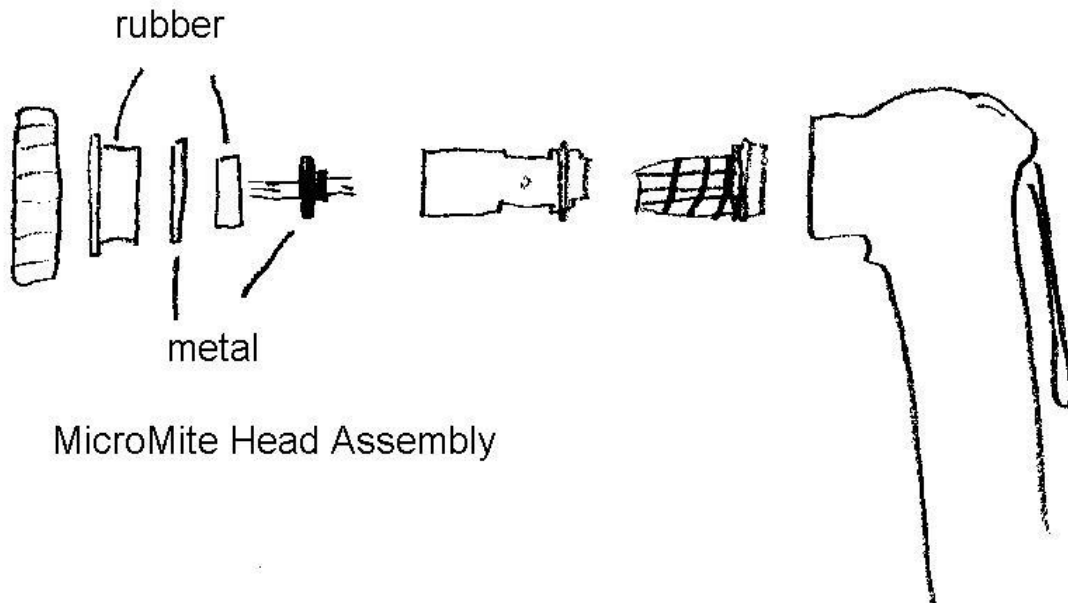

Micromite Head Assembly