



RED ZEPPELIN INSTRUCTIONS FOR MODELS 1019, 1119, 1024

STEP 1: Tighten (close/clockwise) red inflator knob.

STEP 2: Thread on CO2 canister (clockwise).

STEP 3: Screw inflator onto tire valve (clockwise).

STEP 4: Unscrew red inflator knob counter-clockwise to release CO2 into tube. (See table below for approximate maximum inflation pressures.)

STEP 5: Be sure to close red inflator knob to stop CO2 when tire is at desired pressure.

STEP 6: Once empty, please recycle empty cartridges.

Carbon Dioxide

WARNING

Contains gas under pressure; may explode if heated. May cause severe frostbite. May displace oxygen and cause rapid suffocation.

PREVENTION

Avoid contact with eyes and skin. Use in a well ventilated area. Keep away from heat, open flames, and hot surfaces.

RESPONSE





If inhaled: Move person to fresh air, make comfortable, and monitor breathing.

Planet Bike
1-866-256-8510
www.planetbike.com

CO2 INFLATION GUIDE

TIRE SIZE	12 GRAM		16 GRAM		20 GRAM		25 GRAM	
	PSI	BAR	PSI	BAR	PSI	BAR	PSI	BAR
Road	90	6.2	120	8.3	78*	5.4*		
Touring	62	4.3	88	6.0	106	7.3		
CX / Gravel	38	2.6	55	3.8	70	4.8	80	5.5
MTB 26	30	2.0	40	2.8	50	3.5	60	4.1
MTB 29	25	1.7	30	2.0	40	2.8	45	3.1
FAT 26 x 4.0			3	0.21	5	0.34	8	0.54

*This CO2 cartridge can fill two road tires to 78 PSI

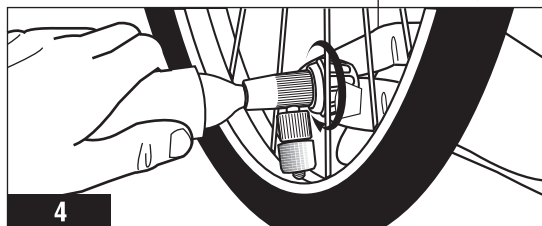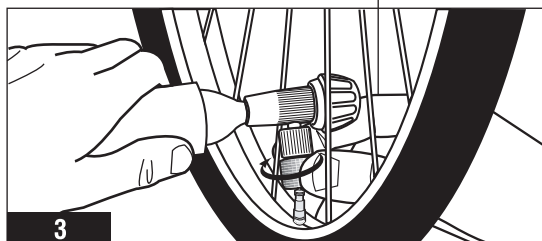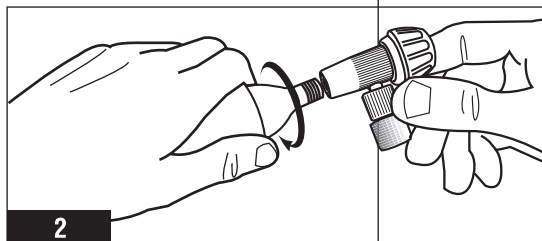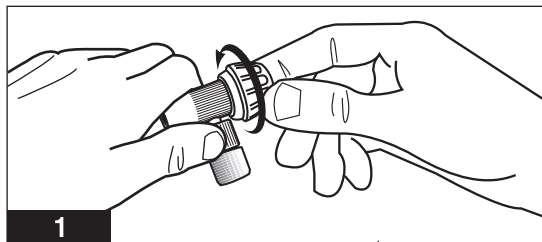

DIRECTIVES POUR RED ZEPPELIN POUR LES MODÈLES 1019, 1119, 1024

ÉTAPE 1: Serrer (fermer/sens des aiguilles d'une montre) le bouton de gonflage rouge.

ÉTAPE 2: Insérer la bouteille de CO2 dans le filetage (dans le sens des aiguilles d'une montre)

ÉTAPE 3: Visser la pompe sur la soupape du pneu (sens des aiguilles d'une montre).

ÉTAPE 4: Dévisser le bouton de gonflage rouge dans le sens contraire des aiguilles d'une montre pour libérer du CO2 dans le tube. (Voir le tableau ci-dessous pour les pressions de gonflage maximales approximatives.)

ÉTAPE 5: S'assurer de fermer le bouton de gonflage rouge pour arrêter le CO2 lorsque le pneu a atteint la pression désirée.

ÉTAPE 6: Recycler les cartouches, une fois qu'elles sont vides.

MISE EN GARDE : Éviter le contact de la peau avec la bouteille de métal pendant et immédiatement après le gonflage en raison

de la congélation de la bouteille. (Ne pas tenter de mettre sa langue sur la bouteille!)

©2025 Planet Bike. All rights reserved. / Tous droits réservés.